
Adjusting endstops, TS700X / TS1000X

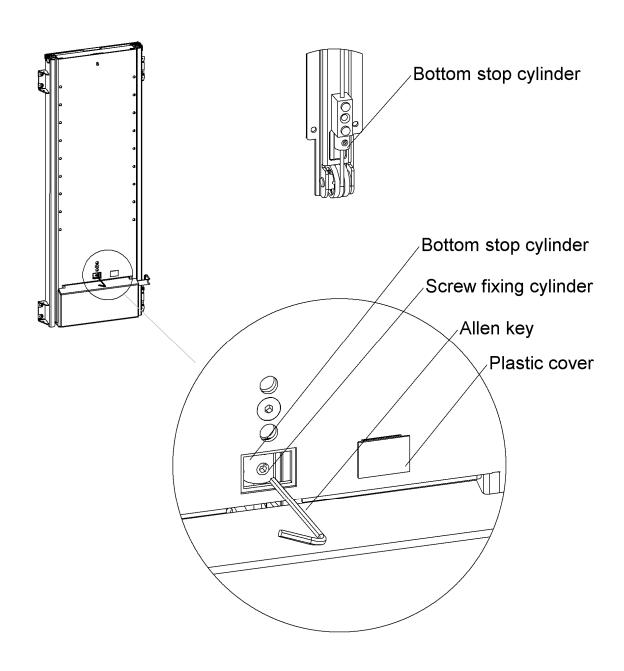

Bottom stop adjustment

- 1. Make sure the lift is in lowest position.
- 2. Remove plastic cover.
- 3. Loosen the bottom stop cylinder screw with approx. 2 rounds. A 2,5mm allen key is required.
- 4. By using the rocker switch move the lift to new min. height.
- 5. Push the bottom stop cylinder down activating the micro switch (a click sound will tell that the switch has been activated) and tighten the cylinder screw.



Adjusting endstops, TS700X / TS1000X



Top stop adjustment

- 1. Move the lift to top position and the adjustable top stop cylinder will become visible.
- 2. Loosen the screw with approx. 2 rounds. A 2.5mm allen key is required.
- 3. By using the rocker switch move the lift down to new max. height ***.
- 4. Push the top stop cylinder down activating the micro switch (a click sound will tell that the switch has been activated) and tighten the cylinder screw.

*** the cylinder may not drop freely when moving the lift down. In that case move approx. 10mm and stop. By e.g. a screwdriver move the cylinder manually. Copy this sequence until the new height is reached and continue with step 4.

